



## Scorpion Plate Gripper Adjustment

1. The plate Gripper 'GRIP' level can be finely adjusted, Using the knurled adjustment screw located centrally to the gripper arms

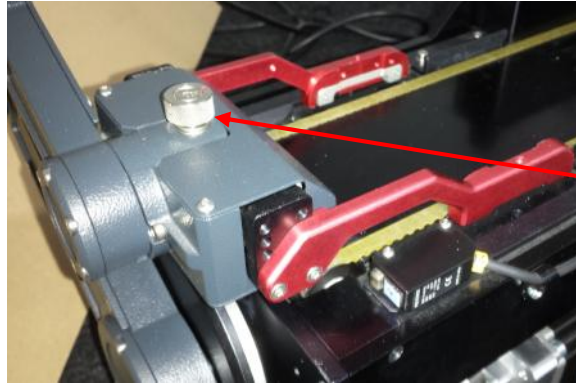

Knurled Adjustment Screw

2. Turning the knurled screw clockwise will Open the gripper arm adjustment and decrease the 'Grip'
3. Turning the knurled screw anti-clockwise will Close the gripper arm adjustment and Increase the 'Grip'
4. Pictures shown below are with gripper cover removed to highlight the adjustment range available.

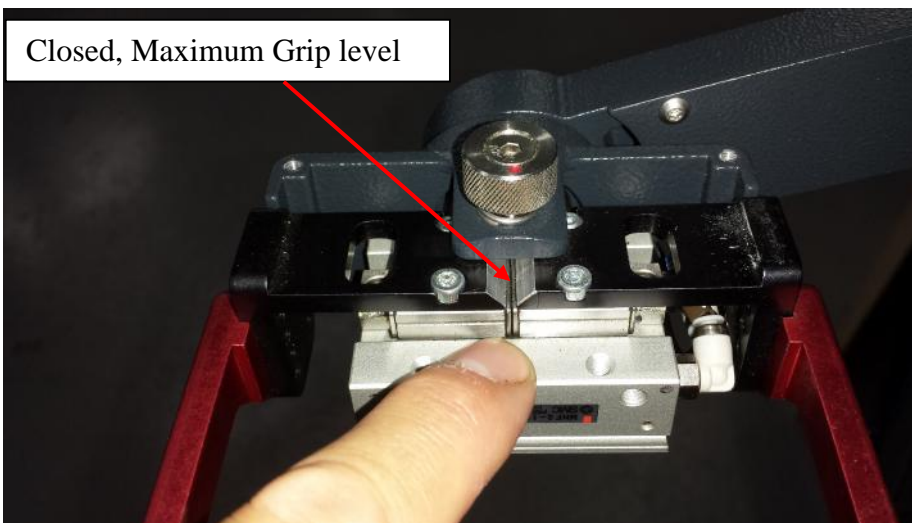

Closed, Maximum Grip level



Open, Minimum Grip Level