

Scorpion Gripper Arm Pins

1. To ensure a plate is gripped securely the Gripper arm Pins can be adjusted.
2. Remove gripper arms.
3. Using a 0.90mm Hex Key release the set screw retaining the gripper arm Pins.
4. Extend or retract pins to suitable position (ensure Left & right Gripper arm pins are at identical setting)
5. Re-tighten set crews.
6. Fit gripper arms.

